




Axess TA2513-10WT Button Replacement

Written By: Lori Scott



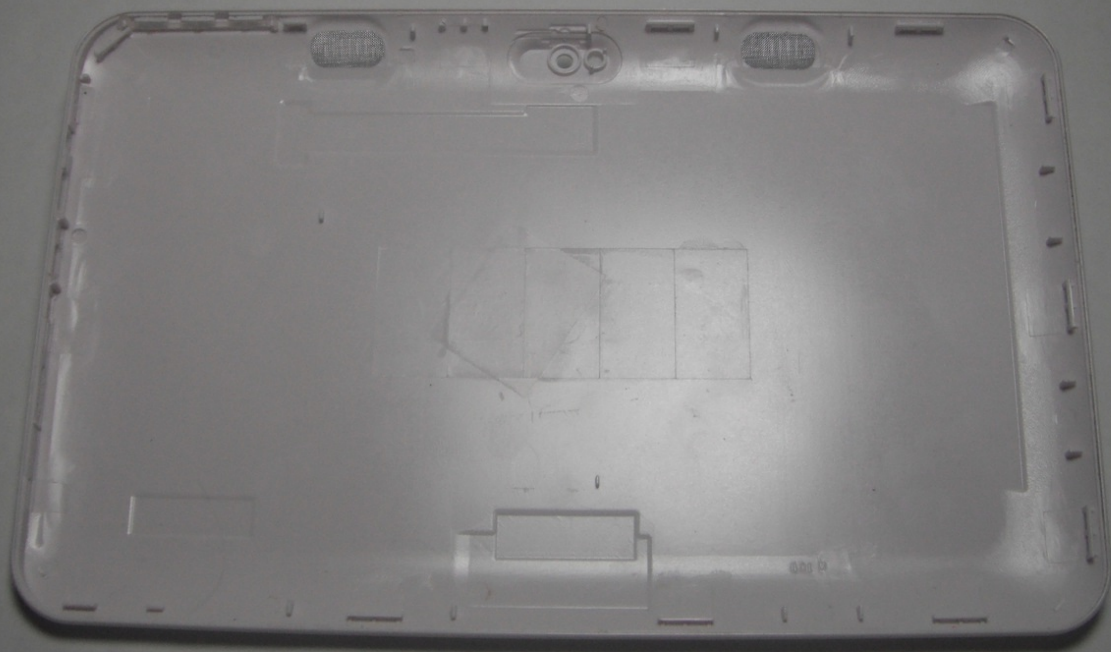

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)



PARTS:

- [Buttons](#) (1)



This is the part you are replacing, whichever of Power, volume up, or volume down is broken.

Step 1 — Back Cover



- Lay the tablet down on a flat surface with the screen facing up, and the external camera facing upwards and closest to you.

Step 2

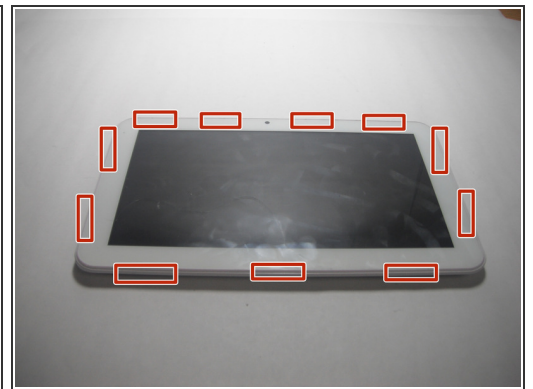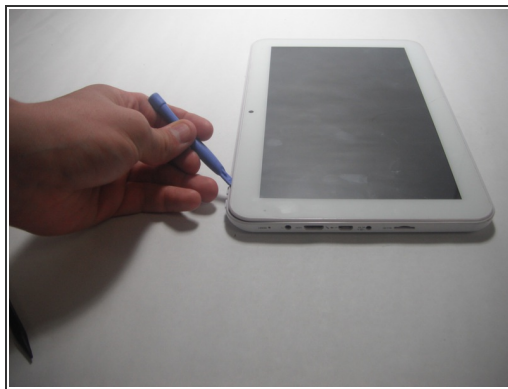

- Insert the plastic opening tool in the space between the screen and the back cover above the volume buttons.
 - Slide the plastic opening tool gently along the sides.
- i** If a small gap is not created between the screen and the back cover, pry gently upward at each of these latching points.

Step 3



- Place the Spudger in an open space to keep the back case from shutting while you continue to slide the opening tool.

Step 4



- Remove the back cover with your hands once all points have been unlatched. It should separate completely from the screen that contains the battery and chip components.

Step 5 — Button




- Orient the tablet's back cover with the buttons facing away from you.
- ⓘ The buttons should be in the following order (Left to Right): Power, Volume up, Volume down.

Step 6





- Unlatch the clear rubber holder from the posts with the tweezers.

Step 7

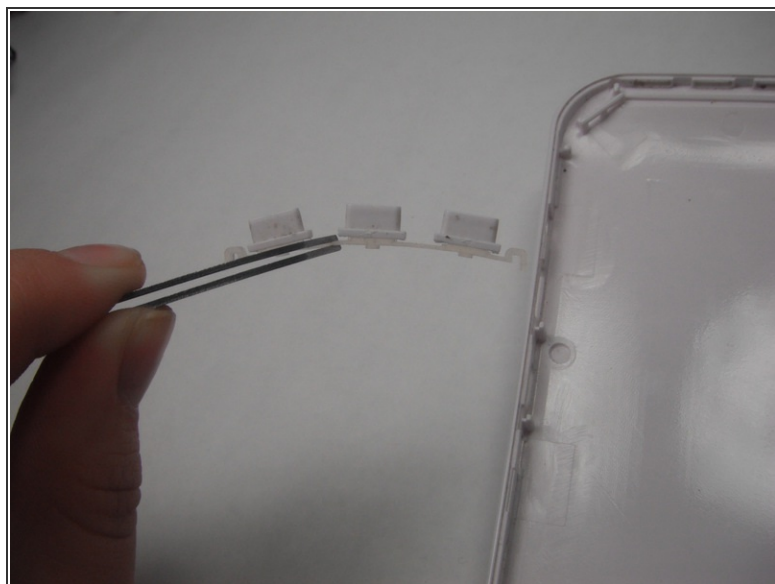

- Pull the rubber holder from the back cover with tweezers, making sure the buttons pass through their respective holes.

Step 8

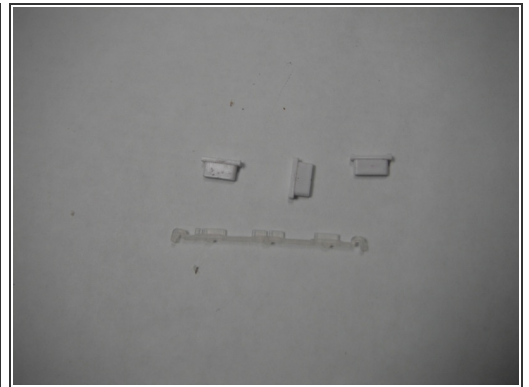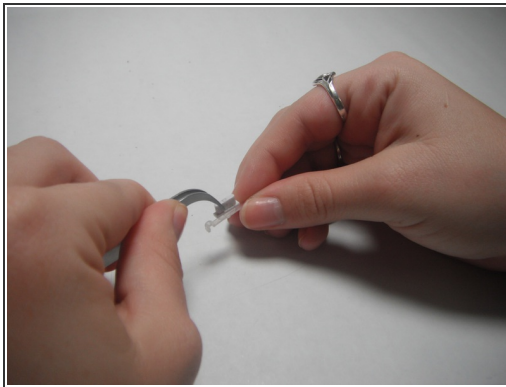

- Remove each of the buttons with the tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 11:09:36 AM.